

## HOW TO ORDER

PRIME CX

X R   C X - A B C D E

-17.8

For blue display please contact Dixell

A		B		C			D			E	
Power supply	Inputs		Buzzer	X-REP (excludes TTL output)	RS485 output (only for XR35/75CX)		Measurement unit	RTC		Compressor output	Connections
0 = 12Vac/dc	P = PTC	0	No	No	No	C	°C	No	0	8A	Screw
1 = 24Vac/dc	N = NTC	1	Yes	No	No	F	°F	No	1	20A	Screw
2 = 24Vac	S = Pt1000 only	2	No	Yes	No	H	°C Heating only for XR10CX	No	3	16A	Screw
3 = 9÷40Vdc	for XR35/75CX	3	Yes	Yes	No	L	°F Heating only for XR10CX	No	6	8A	Faston
4 = 110Vac		4	No	No	Yes	I	°C	Yes	7	20A	Faston
5 = 230Vac		5	Yes	No	Yes	M	°F	Yes	8	16A	Faston
		6	No	Yes	Yes						
		7	Yes	Yes	Yes						